

How to access the Delays menu to activate & adjust the settings.

This feature enables the user to activate and adjust a range of delay features, which include; Gear Reset, N2O ONLY Delay, Fuel ONLY Delay, Burn Out Delay, 1st, 2nd, 3rd, 4th, 5th & 6th Gear Delay, Ext Gear Delay.

From the START menu, press the <ENTER> button to move to the MAIN MENU.

In the MAIN menu, align the cursor with DELAYS using the <UP/DOWN> buttons and then press the <ENTER> button.

In the DELAYS MENU press the <ENTER> button to move the cursor through the list of options.

Activate and adjust the delay option settings, using the <UP/DOWN> buttons.

Press the <ENTER> button to move to another option and repeat the process as required.

N2O Delay: Selecting this feature will allow the user to set a delay to the nitrous side of the system only. This can be particularly useful if the vehicle is seeing a lean spike on activation which is due to the nitrous system when fine tuning. This delay can be applied to any gear and the Burn Out by preference. See further delay options.

Fuel Delay: Selecting this feature will allow the user to set a delay to the fuel side of the system only. This can be particularly useful if the vehicle is seeing a rich spot during a run which is due to the nitrous system when fine tuning.

Burn Out Delay: This will apply the nitrous and fuel delay as mentioned above to the burn out. The user may toggle between the on and off setting.

Gear Delay: : This will apply the nitrous and fuel delay as mentioned above to gears 1 to 6 and can be toggled on and off independently.

Ext Delay: This is an External Gear delay when an aftermarket/high end gearbox is being used which has an output to tell the Max Extreme what gear it is in. Setting this on/off will apply the delays which you have previously selected for the other gears. The user must Set the gears 'on' that need delays on as normal with a throttle lift, but if the user is using either (both have the option) external gear input option and want the delay in those selected gears to activate on a gear change with no throttle lift then turn on the 'Ext Gear Delay'.

Press the <EXIT> button TWO times to return to the MAIN screen.

Screen access flow chart below:



