How to access the RPM Power Trim Feature

This feature allows the Max to deliver nitrous power proportional to the engine rpm. This is achieved by proportionally reducing the nitrous delivery (power), relative to engine rpm by the selected percentage, between the selected start and finish rpm settings.
This allows you to set the 5 power points per gear and also have the engine rpm adjust the power level by up to 40%.
Alternatively, the 5 power points can be set at the same level and then the power build will be directly proportional to the engine rpm rise rather than proportional to time.

From the START menu, press the <ENTER> button to move to the MAIN MENU.

In the MAIN menu, align the cursor with SYSTEM using the <UP/DOWN> buttons and then press the <ENTER> button.

In the SYSTEM menu, align the cursor with INPUTS using the <UP/DOWN> buttons and then press the <ENTER> button.

In the INPUTS menu, the settings can be activated and adjusted by pressing the <UP/DOWN> buttons and then press the <ENTER> button to go to the next setting.

Press the <EXIT> button THREE times to return to the MAIN screen.
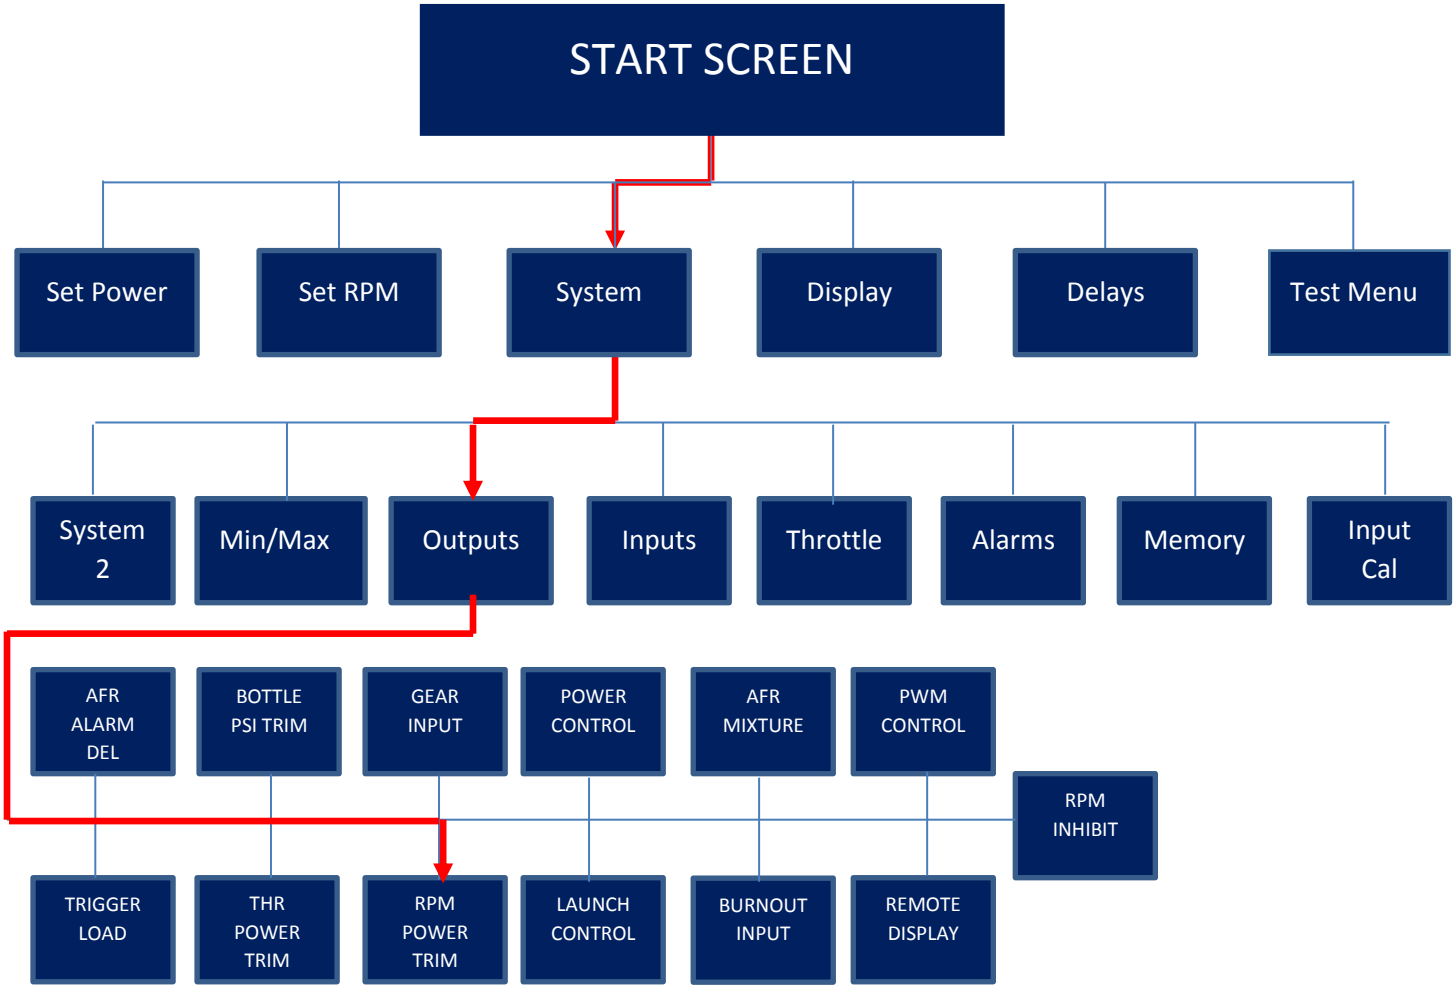
Below is a flow chart on how to get to the RPM POWER TRIM feature: